
ADJUSTMENT OF GAME PC BOARD (LIQUID KIDS G25 00620A)

G-CONNECTOR (JAMMA)

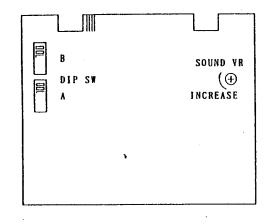

☆ CONTROL OF THIS GAME USES ONE 2-WAY

JOYSTICK AND 2 BUTTONS.

SOLDER SIDE			COMPONENTS SIDE
GND	Λ	1	GND
GND	A B	2	GND
+ 5 Y	С	3	+57
+ 5 V	D	4	+ 5 Y
-5Y	Ē	5	- 5 V
+12V	F	6	+12V
POST	H	7	POST
COIN METER B	J	. 8	COIN METER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER (-)	I.	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P SELECT	U	17	IP SELECT
	٧	18	
	W	19	
2P LEFT	X	20	IP LEFT
2P RIGHT	Y	21	IP RIGHT
2P ATTACK BUTTON	Z	22	IP ATTACK BUTTON
2P JUMP BUTTON	а	23	IP JUMP BUTTON
	b	24	
	C	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

NOTE) BEFORE CHANGING THE SETTING OF THE DIP SWITCH. TURN THE POWER OFF.


SETTING OF DIP SWITCH A

(*): FACTORY SETTING

CILING OF DIE 24			·	<u></u>	·		,	,	
SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
PLAY STILE	TABLE # UPIGNT	OFF	-						
SCREEN ROTATION	* NORMAL REVERSE		OFF				,	1	
TEST MODE	* NORMAL GAME TEST MODE		.1	OFF ON					
ATTRACT SOUND	* WITH WITHOUT				OFF				
PLAY PRICING COIN A	* 1 COIN PLAY 2 COINS PLAY 3 COINS PLAY 4 COINS PLAY					OFF ON OFF ON	OFF ON		
PLAY PRICING COIN B	* COIN 2 PLAYS COIN 3 PLAYS COIN 4 PLAYS COIN 6 PLAYS							OFF ON OFF	OF I

A SETTING OF DIP SWITCH P

SETTING OF DIP SWI	ІТСН В								
SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B	OFF ON	OFF						
	RANK C RANK D	OFF ON	ON	}					
BONUS POINTS	* 30K, 100K, 200K, 300K			OFF ON	OFF		•		
I UP (K=I,000 PTS.)	TS.) 30K, 150K, 300K, 450K PTS. EYERY ON OFF SOK, 250K, 500K, 750K PTS. EYERY OFF ON ON OFF SOK, 350K, 700K, 1050K PTS. EYERY ON ON OFF ON OFF ON OFF ON ON ON ON OFF ON ON ON OFF ON								
NUMBER OF PLAYERS	* 3					ON OFF			
CONTINUE	* WITH WINTOUT							OFF ON	
``	* WHEN DIP SW A-1 IS WITH SCREEN INVE WHEN DIP SW A-1 IS WITHOUT SCREEN I	SET TERSION, SET TERSION	TO "OFI 2-P I TO "ON' ION. S	PLAY. F	ür Ge Control	erät L PANE	mit]	l Joy- stick Play.	OF1
GAME TYPE	WHEN DIP SW A-I IS SET TO "OFF": Für Gerät mit 2 Joywith screen inversion, 2 P PLAY. WHEN DIP SW A-1 IS SET TO ON": Stick WITHOUT SCREEN INVERSION, W-CONTROL PANEL, 2-P PLAY.								

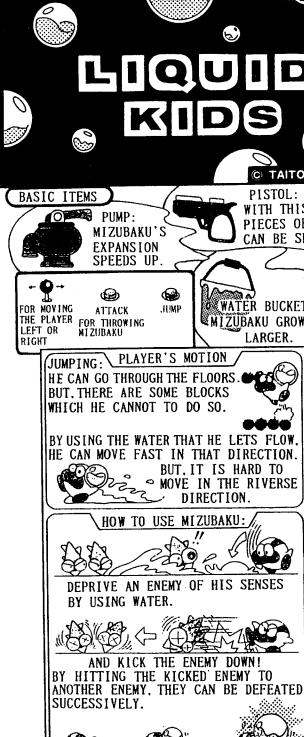

© TAITO CORP. 199

MIZUBAKU'S **EXPANSION** SPEEDS UP

D

G35 00419A

THE WATER CAN BE STORED.



٩

JUMP

PISTOL: WITH THIS. MORE PIECES OF MIZUBAKU CAN BE SHOT

WATER BUCKET:

MIZUBAKU GROWS LARGER.

BUT, IT IS HARD TO

○ MOVE IN THE RIVERSE DIRECTION.

SPECIAL **ITEMS**



BOOTS



THUNDER-



THUNDER-



POWER



COCK



PIG



TRAIN



BY KEEPING THE ATTACK BUTTON PRESSED.

RESULTING IN BEING STRONGER!

TAITO CORPORATION

☆COIN INSERTION FOR 10 CREDITS OR MORE IS OF NO EFFECT