
## ADJUSTMENTS ON GAME PC BOARD (RAINAIS G25 00465A)

CONNECTOR

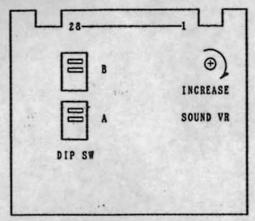

☆ THE CONTROL OF THIS GAME USES
ONE 4-WAY JOYSTICK AND 2 BUTTONS.

NOTE)

BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER SWITCH OFF.

SOLDER SIDE		COMPONENTS SIDE			
GND	IA	III	GND		
GND	B	2	GND		
+5V	C	3 1	+5V		
+5 V	D	1 4	+5V		
-5V	E	5	-5V		
+12V	F	6	+12V(+13V)		
POST	I H	71	POST		
(COIN COUNTER B)	IJ	8	COIN COUNTER A		
(COIN LOCKOUT B)	K	9	COIN LOCKOUT A		
SPEAKER (-)	IL	10	SPEAKER (+)		
	M	111			
VIDEO G	N	12	VIDEO R		
VIDEO SYNC	P	13	VIDEO B		
SERVICE SW	R	14	VIDEO GND		
TILT SW	S	15			
(COIN B)	T	16	COIN A		
2P START	T U	17	1P START		
2P UP	IV	18	1P UP		
2P DOWN	A	19	1P DOWN		
2P LEFT	I X	20	1P LEFT		
2P RIGHT	IY	21	1P RIGHT		
2P FIRE	1 2	22	1P FIRE		
2P ACCELERATOR	a	23	1P ACCELERATOR		
	1	24			
	C	25			
	d	26			
"GND	e	27	GND		
GND	11	28	GND		

## SETTING OF DIP SWITCH A

(\*) : FACTORY SETTINGS

SETTING	POSITION	1	2	3	4	5	5	1	8
GAME STYLE	TABLE	OFF	100		100				
	UPRIGHT	ON							
SCREEN INVERSION	* NORMAL		OFF		15 8	1 18.		1080	
	INVERSION		ON					000	
TEST MODE	* NORMAL GAME	7.5		OFF		-			
	TEST MODE			ON					
ATTRACT SOUNDS	* PRODUCED	OF E			OFF				
	NO PRODUCED	• ON			ON				
	1 COIN 1 PLAY		77.36			OFF .	OFF		
PLAY PRICING	COINS & PLAY					ON	011		
COIN A	2 COINS 1 PLAY					OFF	ON		
	2 COINS 3 PLAY					ON	0.11		
PLAY PRICING COIN B	1 COIN A PLAYS		1					OFF	OF
	1 COIN PLAYS							ON	1
	2 COIN A PLAYS							OFF	ON
	2 COIN & PLAYS	1000						ON	1 011

## SETTING OF DIP SWITCH B

SETTING	POSITION	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY A →	* RANK B	OFF	OFF	n.		13.00			100
	RANK A	ON				188			
	RANK C	OFF	ON			130	-31	100	
DIFFICULT D	RANK D	ON	7 04	100	2.35		0.51		
BONUS POINTS	* 80,000 PTS.			OFF	OFF ON OF				17
	80,000 PTS. EVERY	- 120		ON					200
	160,000 PTS.			OFF			1771	000	5.3
	NO BONUS			ON		011			
NUMBER OF PLAYER	* 3					OFF	OFF		
	4	100				ON	011-		
	1					OFF	ON		
	2					ON	0.0		
CONTINUED PLAY	WITHOUT	On a							OFF
	* WITH								ON