

**JALECO**



# BIG STRIKER™

## INSTRUCTION MANUAL



**JALECO EUROPE**

Rowlandson House, 289 Ballards Lane  
Finchley, London N12 8NP United Kingdom  
Tel.081-446-8431 Fax.081-445-6493

**JALECO USA, INC.**

310 Era Drive, Northbrook, IL 60062 U.S.A.  
Tel.708-480-1811 Fax.708-480-9231

**JALECO LTD.**

2-19-7 Yohga, Setagaya-ku, Tokyo 158, Japan  
Tel.03-3708-4830 Fax.03-3708-4822 Telex.J27891




# BIG STRIKER™

EDGE CONNECTOR DIAGRAM (EDGE CONNECTOR OF JAMMA SPECS.)


COMPONENT SIDE		SOLDER SIDE	
GND	1	A	GND
GND	2	B	GND
HEADPHONE L&R(-)	3	C	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
KEY TO PREVENT ERRONEOUS INSERTION	7	H	KEY TO PREVENT ERRONEOUS INSERTION
COIN METER #1	8	J	COIN METER #2
	9	K	
SPEAKER 1 (+) HEADPHONE L (+)	10	L	SPEAKER 1 (-)
	11	M	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BLUE	13	P	VIDEO SYNC
VIDEO GND	14	R	SERVICE SWITCH
	15	S	
COIN SW #1	16	T	COIN SW #1
START SW #1	17	U	START SW #2
1P UP	18	V	2P UP
1P DOWN	19	W	2P DOWN
1P LBFT	20	X	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1P PUSH 1	22	Z	2P PUSH 1
1P PUSH 2	23	a	2P PUSH 2
	24	b	
	25	c	
	26	d	
GND	27	e	GND
GND	28	f	GND

SPEAKER #2 (+) HEADPHONE R (+)	1	2	SPEAKER #2 (-)
-----------------------------------	---	---	----------------

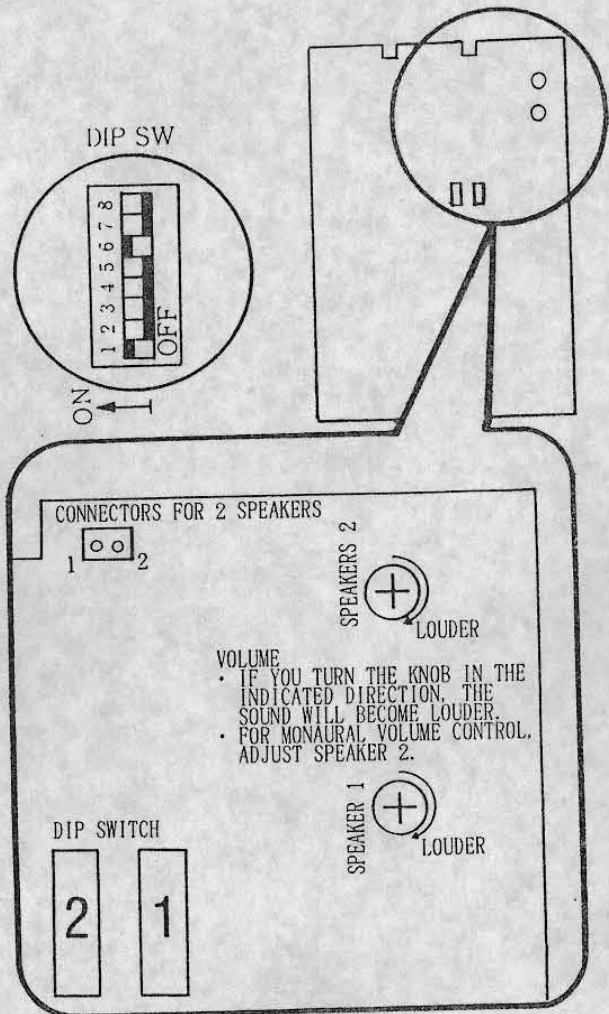

- THE EDGE CONNECTOR USED IS JAMMA 3.96 PITCH
- THE CONNECTOR USED FOR SPEAKER 2 IS 2.5 PITCH

● CONTROLS

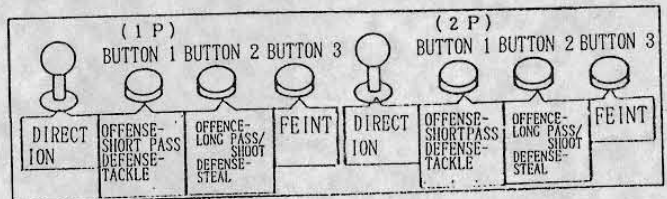

- 8 DIRECTIONS
- SIDE SCROLLING
- 3 BUTTONS

### ● DIP SWITCH 1

(No.)				COIN CHUTE 1				COIN CHUTE 2							
				1	2	3	4	5	6	7	8				
1	COIN	1	CREDIT	OFF	OFF	OFF	OFF								
1	"	2	"	ON	OFF	OFF	OFF								
1	"	3	"	OFF	ON	OFF	OFF								
1	"	4	"	ON	ON	OFF	OFF								
1	"	5	"	OFF	OFF	ON	OFF								
1	"	6	"	ON	OFF	ON	OFF								
2	"	1	"	OFF	ON	ON	OFF								
3	"	1	"	ON	ON	ON	OFF								
4	"	1	"	OFF	OFF	OFF	ON								
2	"	3	"	ON	OFF	OFF	ON								
1	COIN	1	CREDIT									OFF	OFF	OFF	OFF
1	"	2	"									ON	OFF	OFF	OFF
1	"	3	"									OFF	ON	OFF	OFF
1	"	4	"									ON	ON	OFF	OFF
1	"	5	"					OFF	OFF	ON	OFF				
1	"	6	"					ON	OFF	ON	OFF				
2	"	1	"					OFF	ON	ON	OFF				
3	"	1	"					ON	ON	ON	OFF				
4	"	1	"					OFF	OFF	OFF	ON				
2	"	3	"					ON	OFF	OFF	ON				
FREE PLAY				ON	ON	ON	ON	ON	ON	ON	ON	ON			

### ● DIP SWITCH 2

(No.)		1	2	3	4	5	6	7	8							
SCREEN	REGULAR	OFF														
	INVERSE	ON														
DIFFI- CULTY LEVEL	STANDARD									OFF	OFF					
	HARD									ON	OFF					
	EASY									OFF	ON					
	VERY HARD									ON	ON					
GAME TIME	STANDARD											OFF	OFF			
	SHORT											ON	OFF			
	LONG											OFF	ON			
	REALLY SHORT											ON	ON			
DEMO SOUND	ON													OFF		
	OFF													ON		
CREDITS NEEDED TO PLAY	2 CREDITS														OFF	
	1 CREDITS														ON	
TEST MODE	ON								OFF							
	OFF								ON							

- SOME MONITOR SCREENS ARE INVERTED. IF THIS IS THE CASE, PLEASE SET THE SWITCH IN THE OPPOSITE DIRECTION. THE SCREEN DIRECTION SHOULD CHANGE. (THE PLAYER'S CONTROLS SHOULD REMAIN THE SAME.)
- ALL SWITCHES ARE SET TO OFF WHEN IT LEAVES THE FACTORY FOR SHIPMENT.
- MAKE SURE TO TURN OFF THE POWER BEFORE SETTING THE DIP SWITCHES.
- IF DIP SWITCH 2. #8. IS SET TO ON, WHEN THE POWER IS TURNED ON, THE TEST MODE WILL RUN. USE THE 1P JOYSTICK TO MAKE YOUR SELECTION AND THE 1P START BUTTON TO EXECUTE.

**JALECO**

