

COMMAND SUMMARY

KEY FUNCTION

 
 
 
 
- A Select item
- B Return to previous screen
- Move up and down list
- Move left and right to select letters

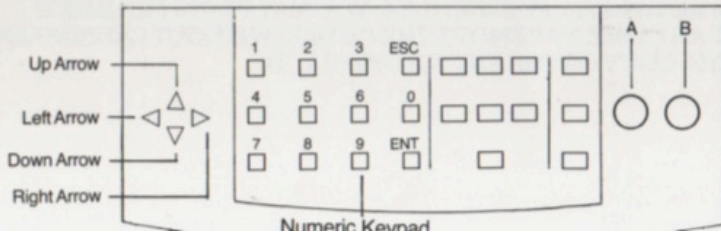 
SHORT CUT KEYS

KEY FUNCTION

- 1 Select Title Find
- 2 Select Pictures
- 3 Select Maps
- 4 Select Help
- 5 Select Guided Tour
- 6 Save search word to Memory
- 7 Recall search word from Memory
- 8 Toggle sound effects on/off
- 9 Select Index
- 0 Select main menu
- ESC Erase typing

ICON FUNCTION

-  Select previous article
-  Select next article
-  Select image
-  Select sound



CDTV
MULTI/MEDIA

The
HUTCHINSON



ENCYCLOPEDIA

PAL VERSION

Reference



OPERATING INSTRUCTIONS

Thank you for purchasing the Hutchinson Multimedia Encyclopedia for CD-TV. If this is the first time you have used the Encyclopedia, we strongly recommend that you view the guided tour sequence contained on the disc (lasts approximately 3 minutes).

STARTING UP

Switch on CD-TV and television.

Insert Hutchinson CD-TV disc, label uppermost, in caddy. Insert caddy into slot in CD-TV until it clicks into place. After a few seconds the CD-TV logo will appear on screen, followed by the ATTICA logo and Hutchinson Encyclopedia CD-TV opening sequences. If you do not touch the controller an introduction and guided tour to the contents and operation of the encyclopedia will play. This sequence lasts for approximately 3 minutes. At any time you can interrupt the guided tour and go to the main system menu by pressing button "A". When the main menu is displayed, select the required option by moving the highlighter with the arrow keys, and press button "A" to select. At any time, selecting button "B" will take you back to the previous screen.

TITLE SELECT

Choose any one of over 25,000 entries in the encyclopedia using the title select. To select the article title of the entry use the right and left arrow keys to position the red cursor over the letter required, then press "A" to select the letter. The entries chosen will be displayed on the screen. Enter the first few letters of the word you are seeking. It is not necessary to enter the whole word. Once the word appears in the list on screen you can highlight it with the up and down arrows and select it using the "A" button. If an entry is larger than a single screen, you can move up and down the article using the left and right arrow keys. If an image or sound sequence is available for an entry, an icon will be shown. This can be selected using the arrow keys and button "A". Press button "B" to return.

INDEX

Using the index, you can find all of the articles containing a word, such as CHURCHILL. Enter the word for which you are searching, and a list of articles will be

displayed. To view an article, highlight it by using the arrow keys, and press button "A" to select.

PICTURES

You can view all the pictures in the encyclopedia in a random sequence by selecting PICTURES. To view an article associated with a picture, press button "A" while the picture is on screen.

MAPS

Select MAPS to view an atlas of the world. You can zoom in on an area by moving the on screen pointer with the arrow keys to the part you wish to view and pressing button "A".

HELP

The help section explains how the encyclopedia works. Simply select the topic required with the arrow keys and press button "A".

INFO

This section contains information about the encyclopedia, details of other CD-TV titles from ATTICA Cybernetics, and credits for the contents and producers of the encyclopedia.

CLOSE

This ends your session on the encyclopedia. Press the eject button to remove the disc, or press reset to start up again. PLEASE NOTE: YOU MAY PRESS THE EJECT BUTTON AT ANY TIME TO REMOVE THE CD DISC WITHOUT CAUSING ANY HARM TO THE CD-TV OR THE ENCYCLOPEDIA CD.