

INTELLIVISION™ Intelligent Television

SKIING CARTRIDGE INSTRUCTIONS UPDATE!!

CLEAR and ENTER shown on the overlays have been incorrectly placed. Each time the overlay is shown, these two should be reversed: CLEAR should be on the left . . . and ENTER should be on the right.

Please note these changes on pages:

- 1, Add Overlays.
- 2, Examine Your Controls.
- 5, Select The Course.