

IMPORTANT NOTICE!

The "pre-recorded data cassette tapes" referred to in the instructions are no longer going to be made and distributed. Please disregard any game buttons, instructions, and warranty information relating to the use of such tapes. This includes the "READ TAPE" buttons designated by the overlay and the reference material on those buttons which is stored in the "HELP" function of your cartridge. In your instructions, pages 13 through 16 Are No Longer Applicable. Specific references to cassette tapes on pages 4 and 36 should also be disregarded.

Correction on page 7:

Song in Memory (Button #12) — The Song You Recorded (page 10)

4540-0270

© Mattel Electronics, Inc. 1983. Hawthorne, CA 90250.
PRINTED IN U.S.A. All Rights Reserved. (L001)